

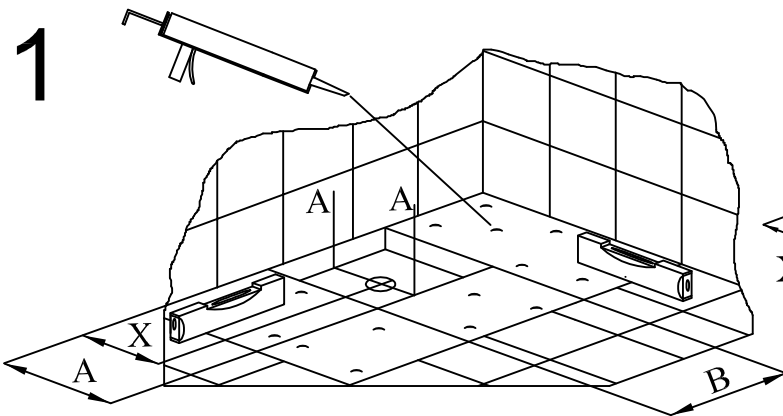
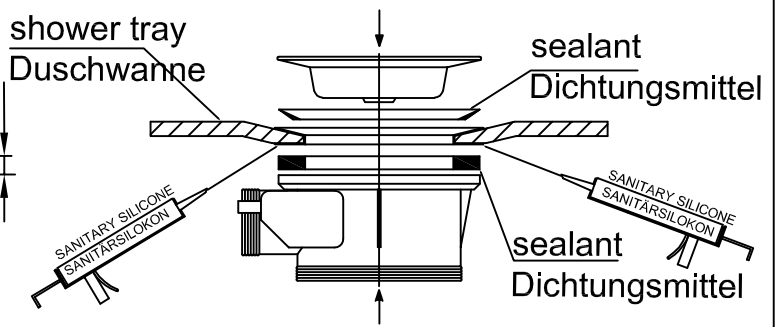


Preparation of the sites for the siphon and assembly for floor installation for shower tray CANARY
Vorbereitung der Stelle für Siphon und Montage für Bodeneinbau für Duschwanne CANARY


1

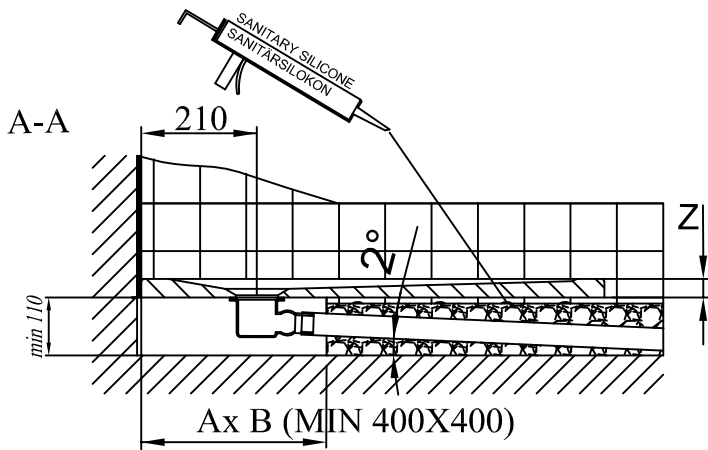


CANARY 90X75, 100X80, 120X80, 120X90, 140X90

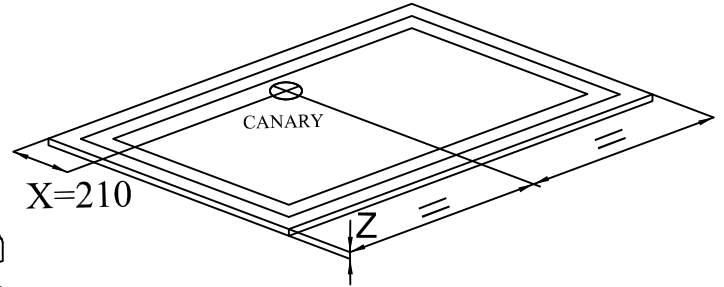



2

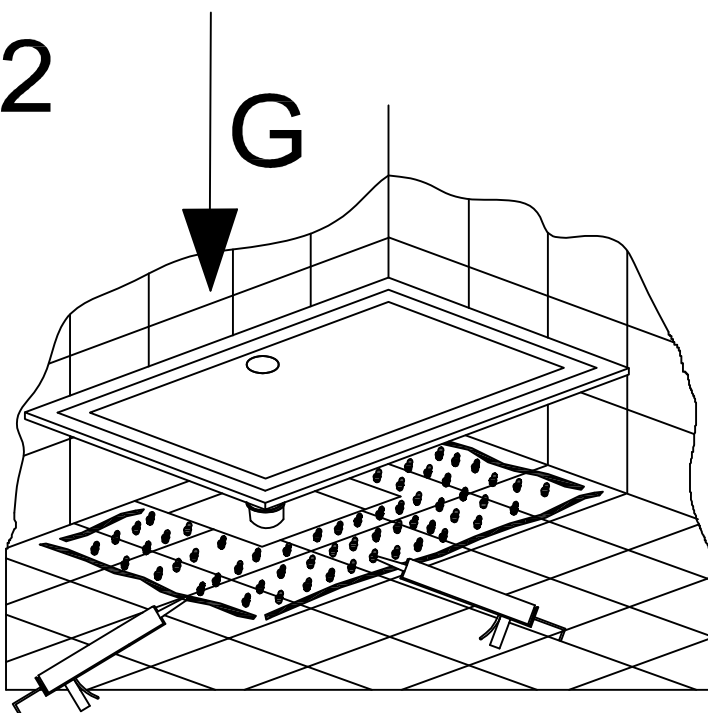







3

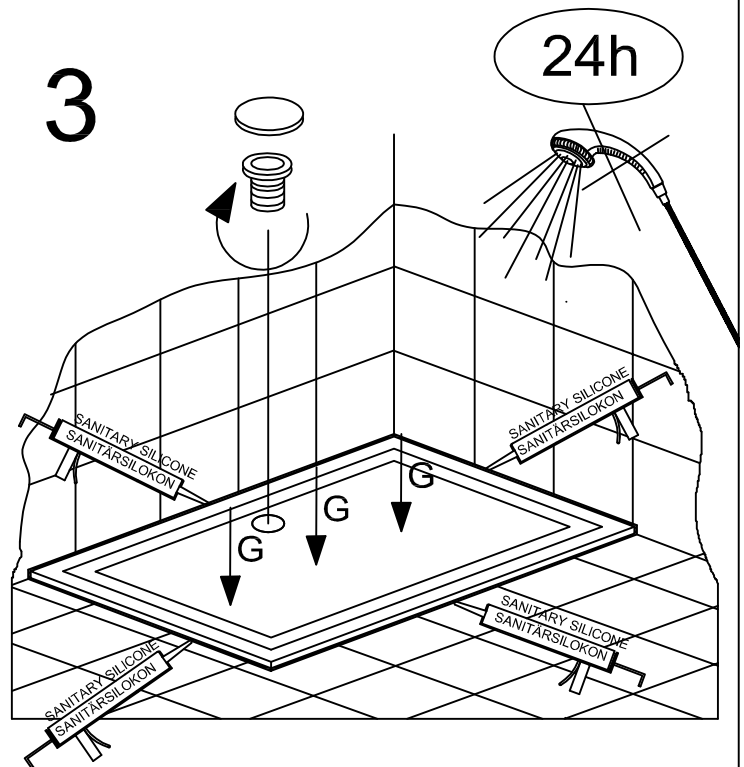






MOONWALK, RE-WALK, ACRO, PANDORA, CANARY, CAPO, LIMBO

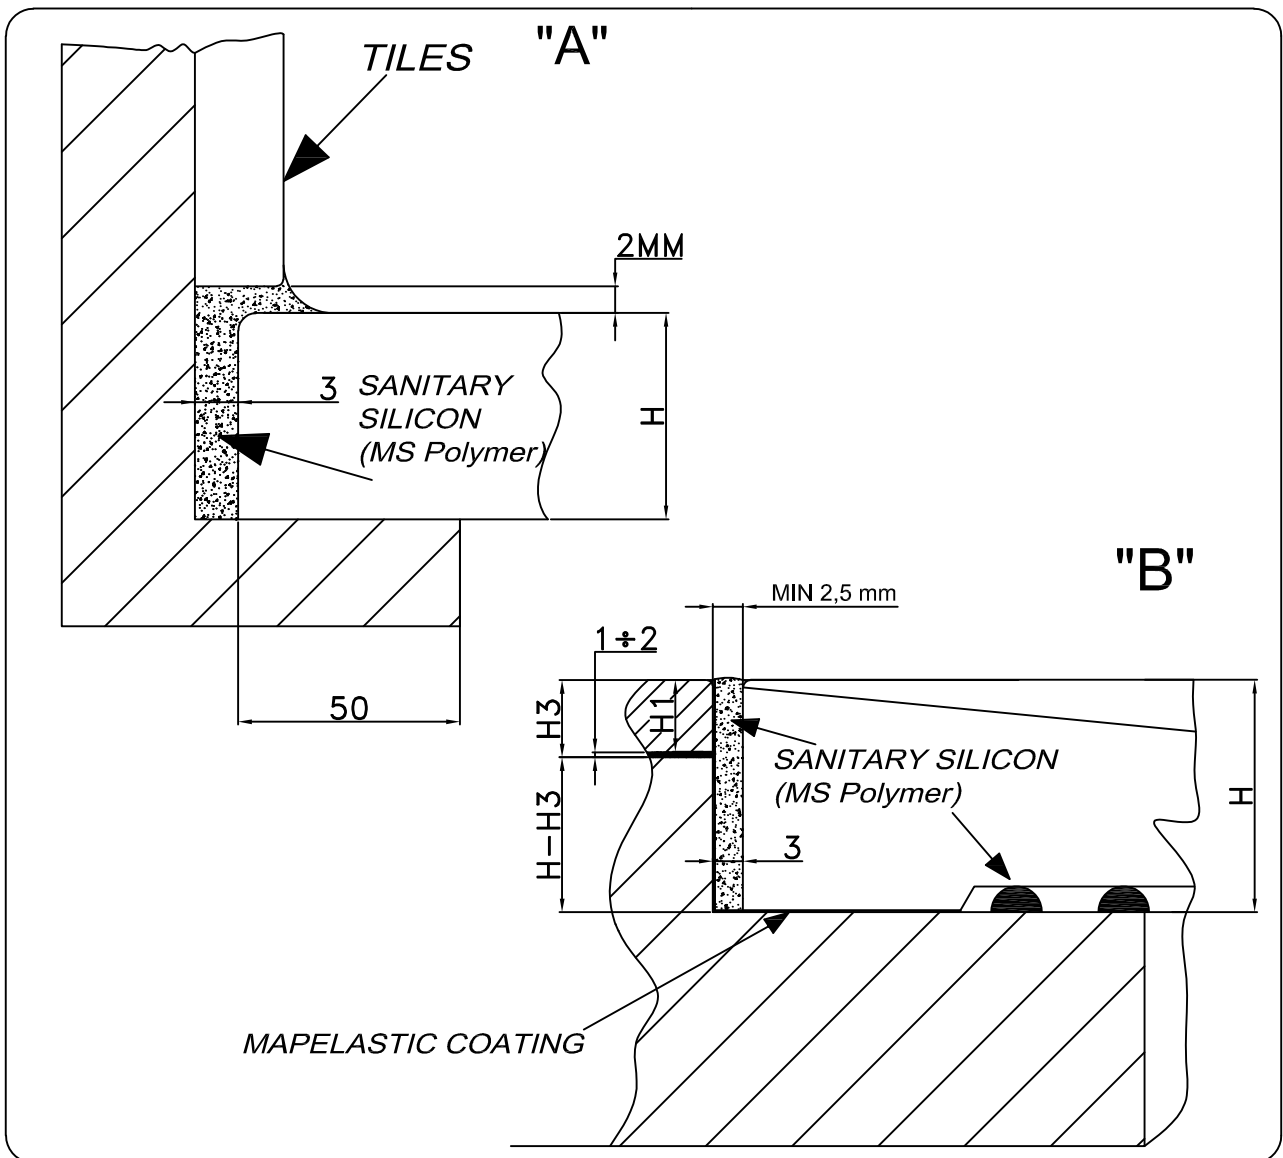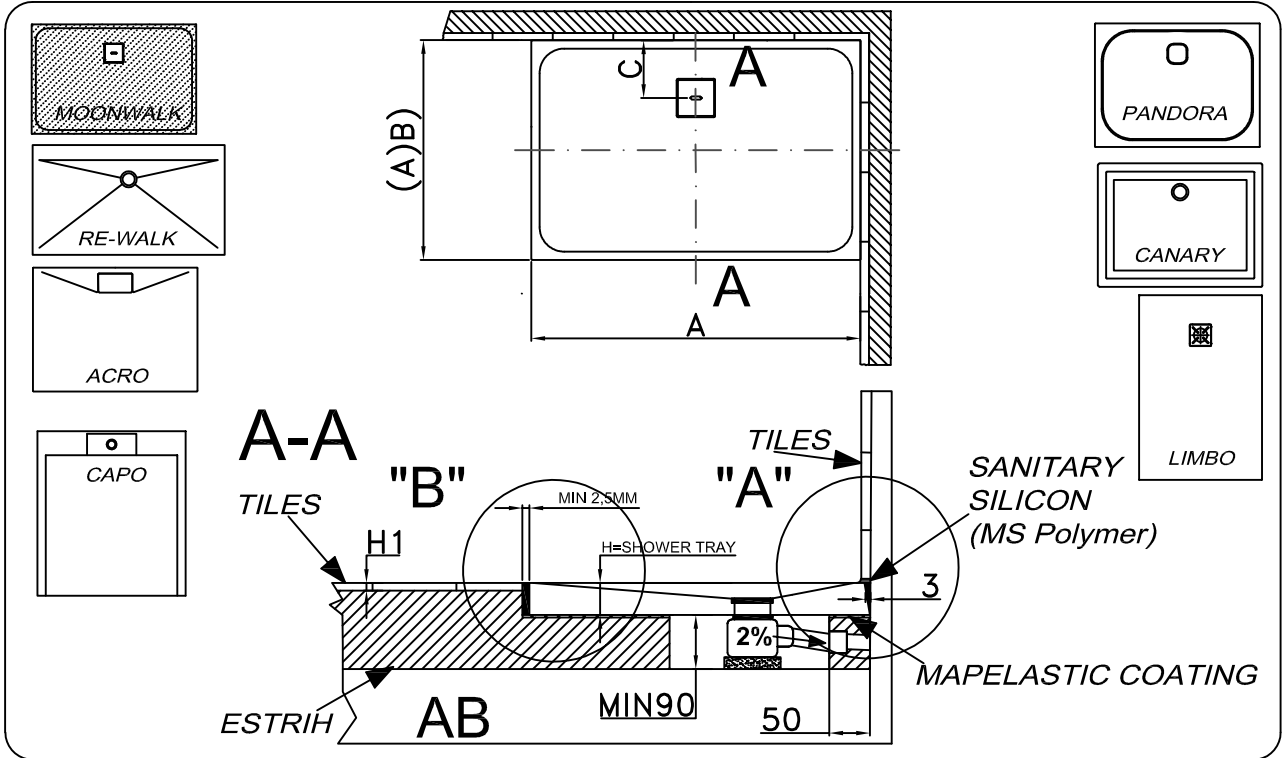


MOONWALK, RE-WALK, ACRO, PANDORA, CANARY, CAPO, LIMBO

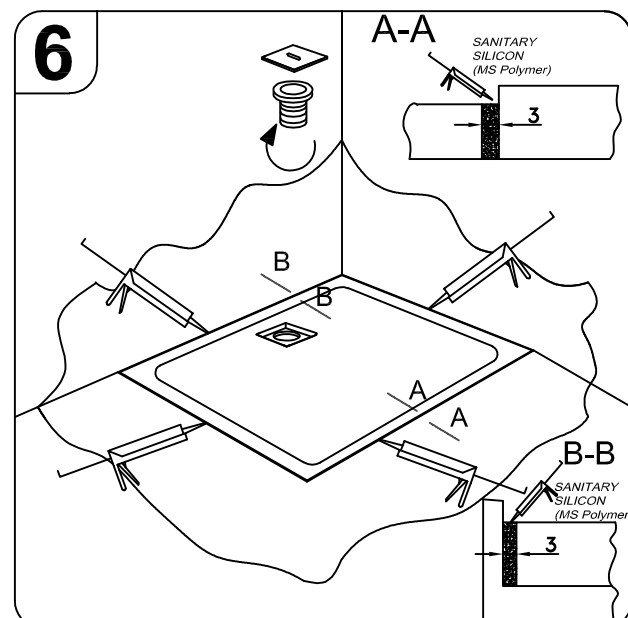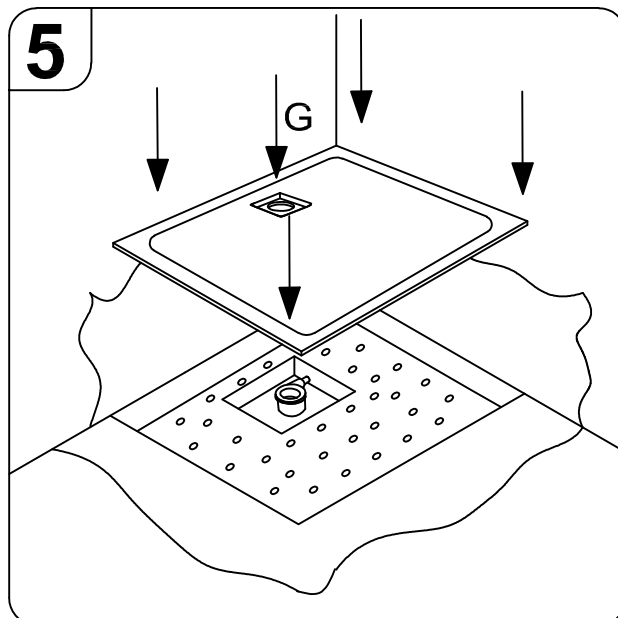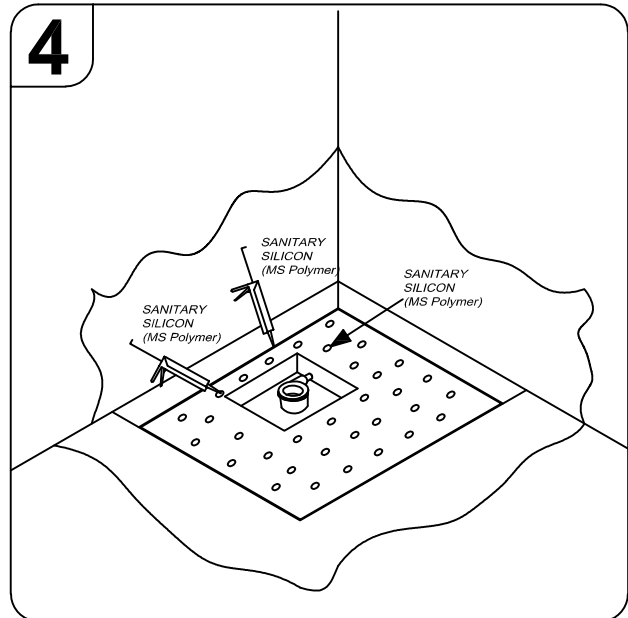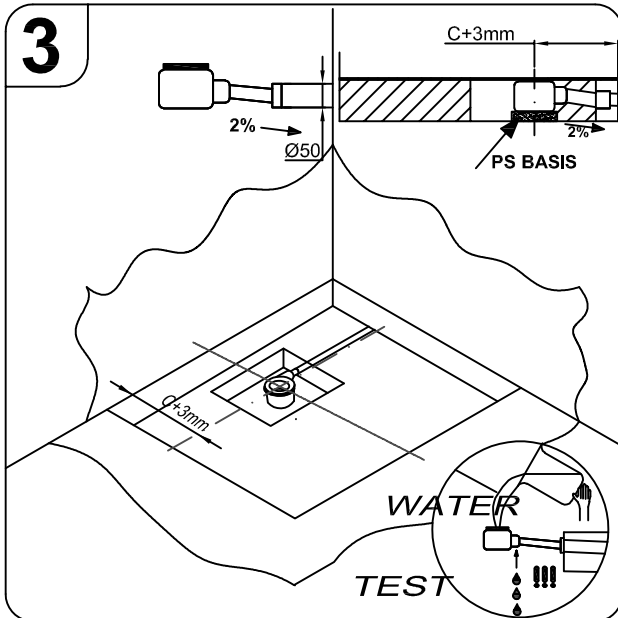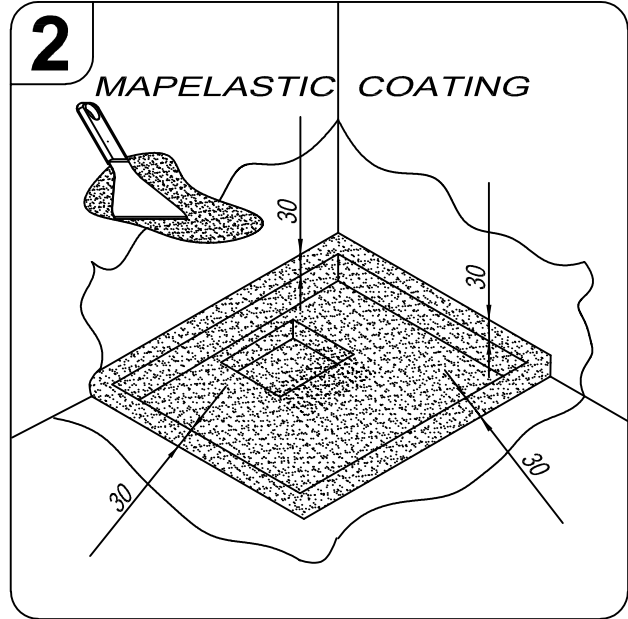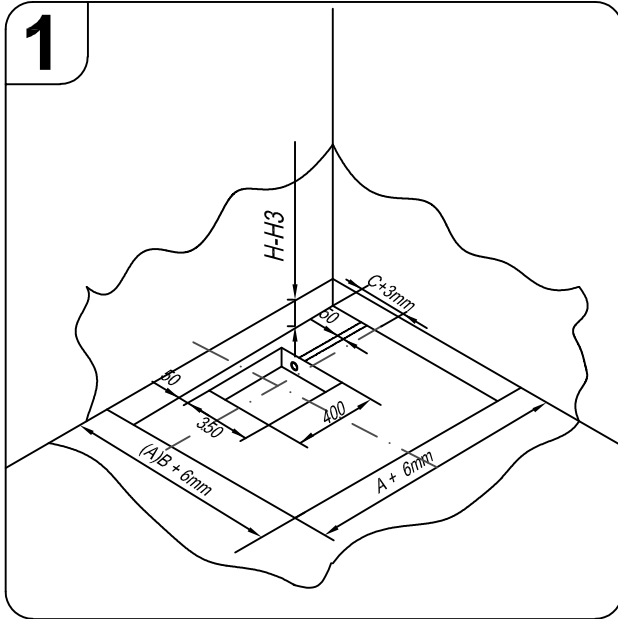


MOONWALK, RE-WALK, ACRO, PANDORA, CANARY, CAPO, LIMBO

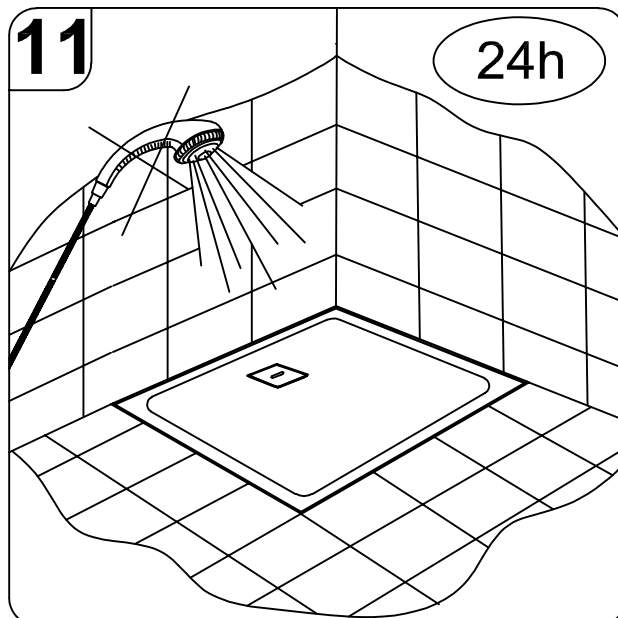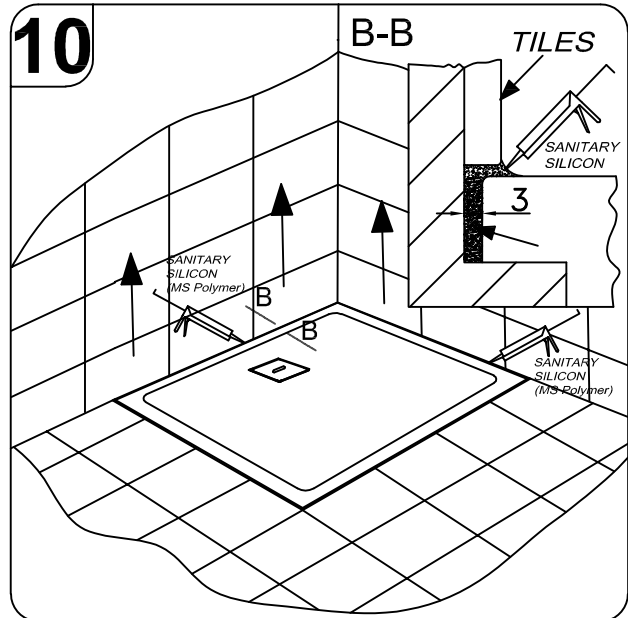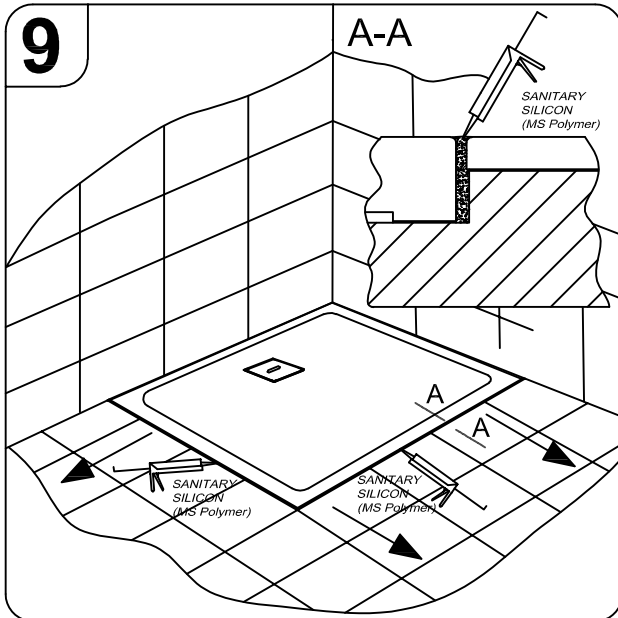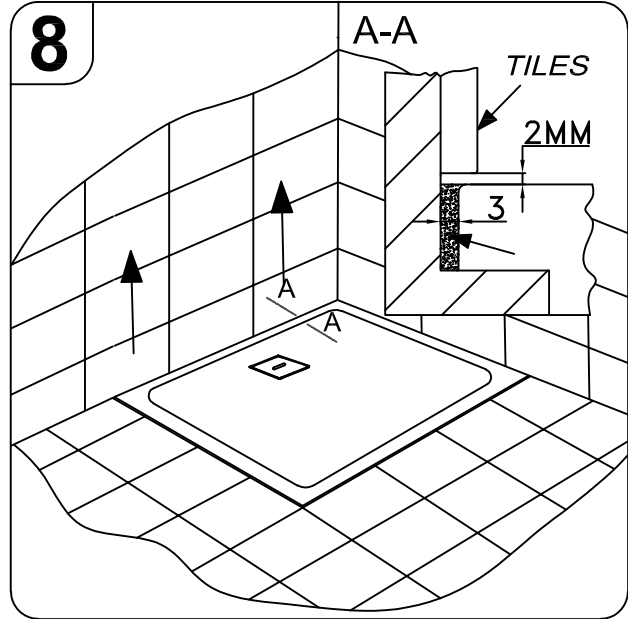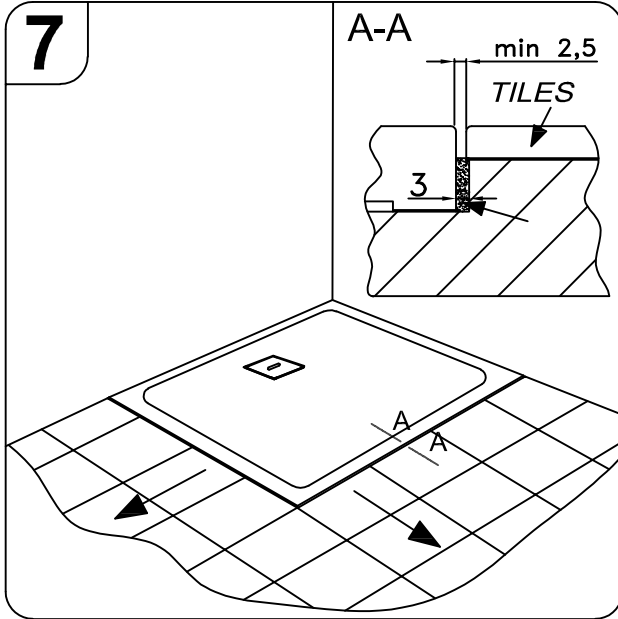


1. De-installation of the panel
 Demontage der Schürze

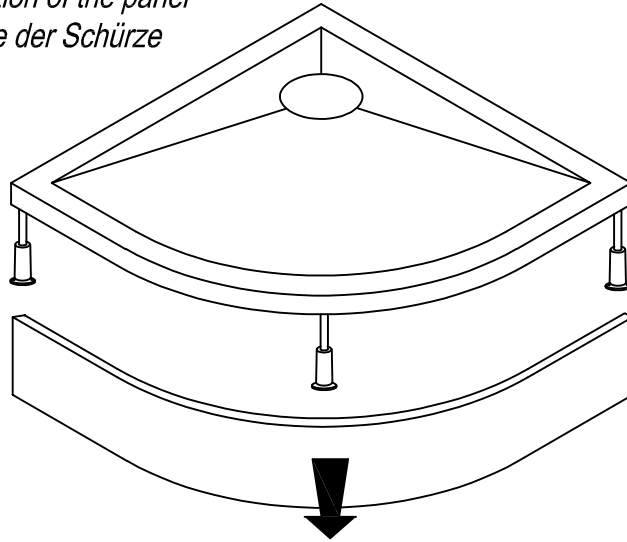



2. Leveling
 Nivellieren

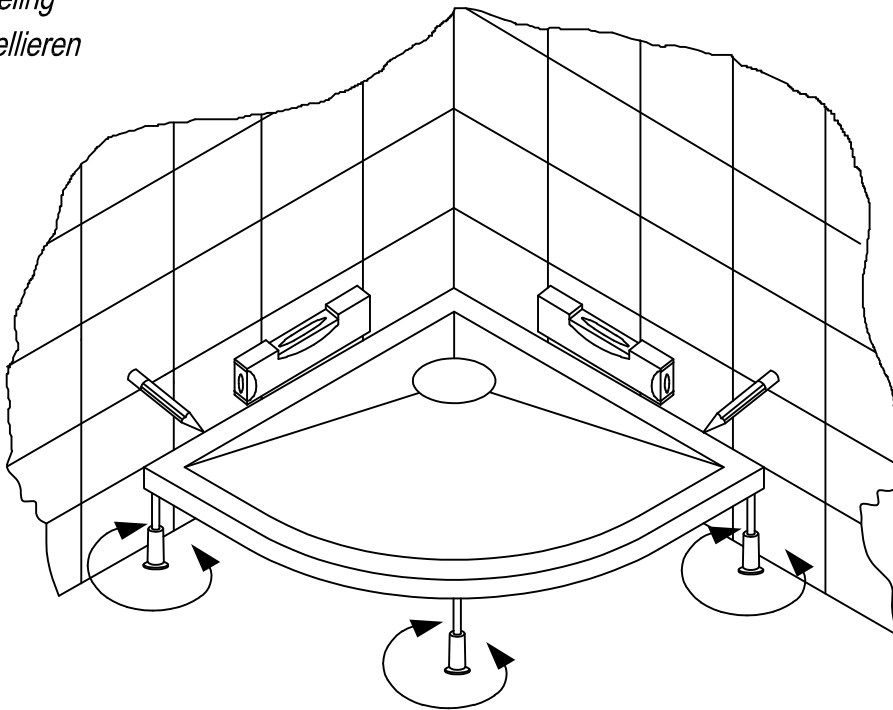


3. INSTALLATION OF SIPHON
 SIPHON-MONTAGE

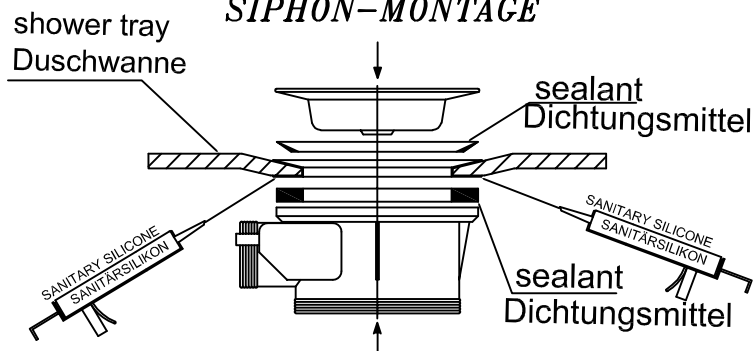


4. Mounting of the panel and siliconizing
 Montage von Schürze und Siliconieren

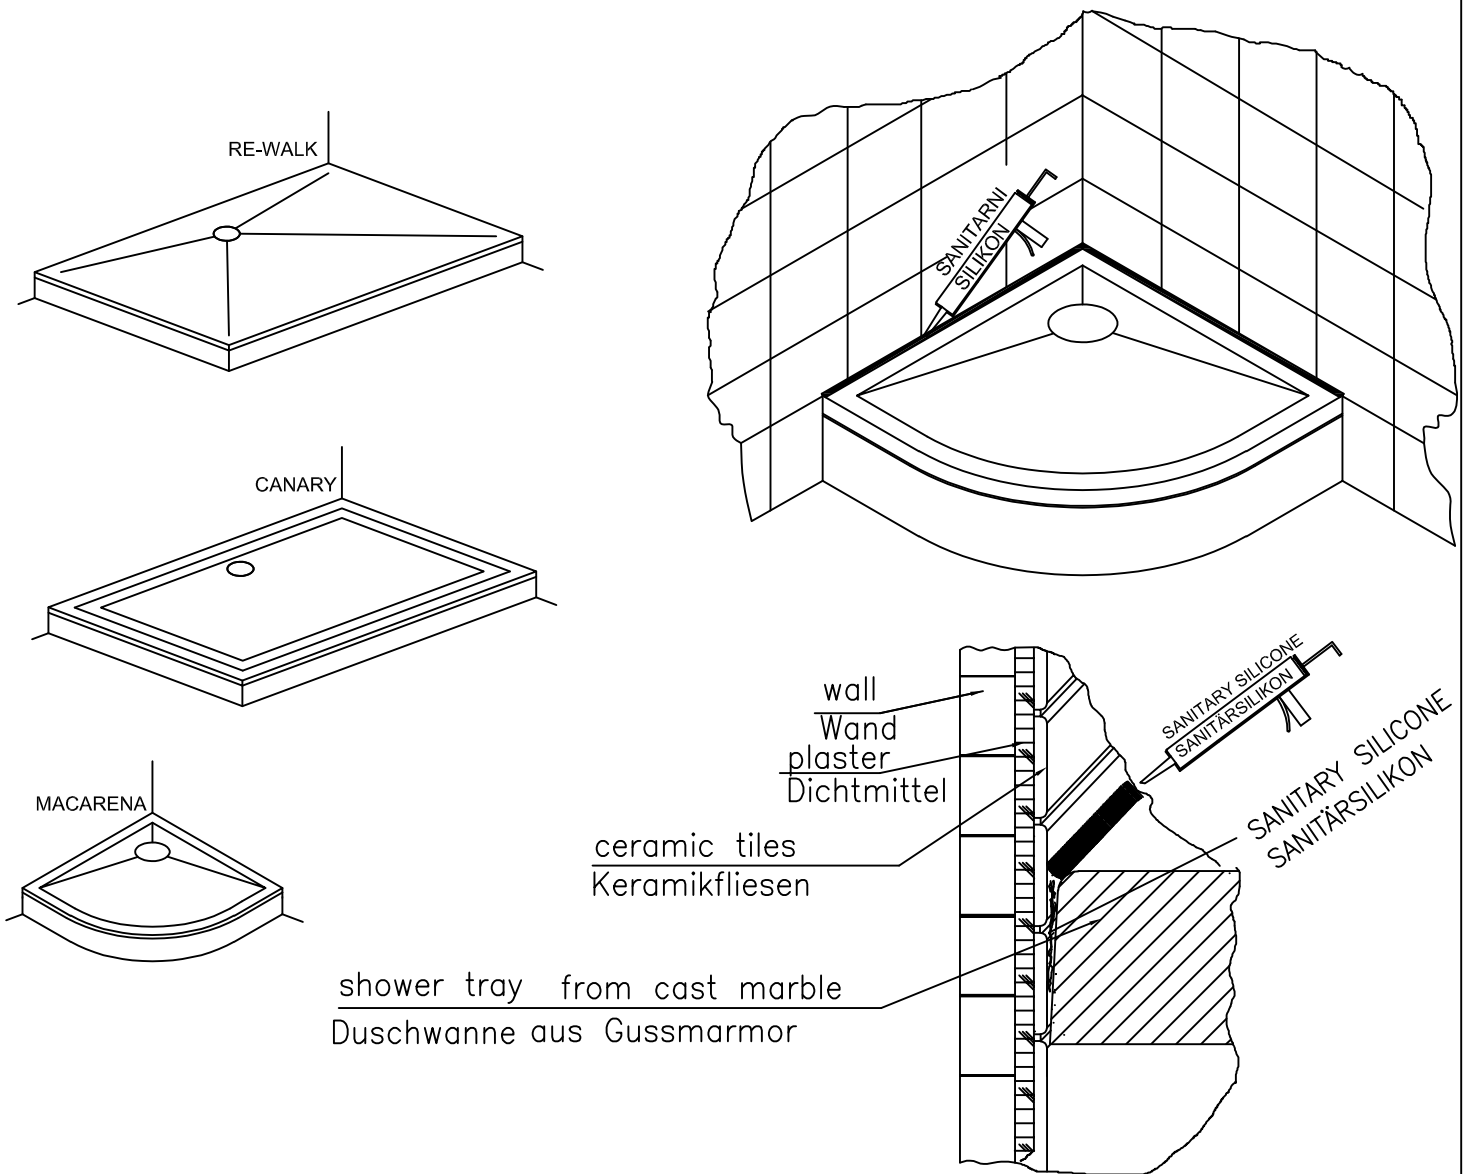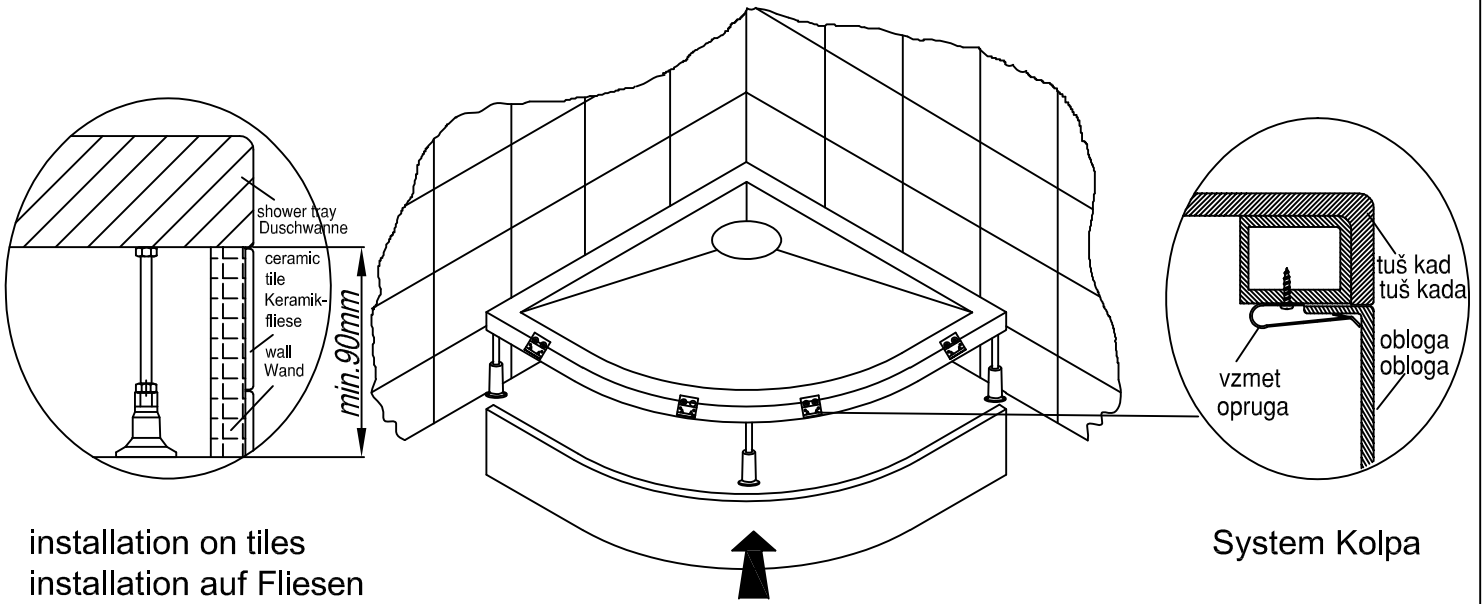


1

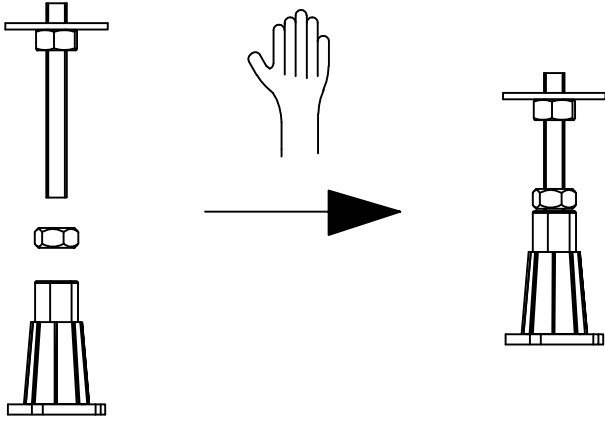


2

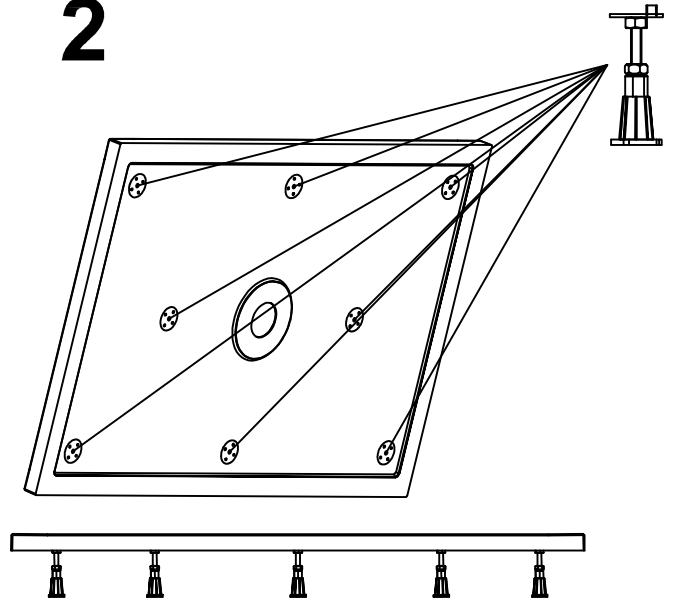


3

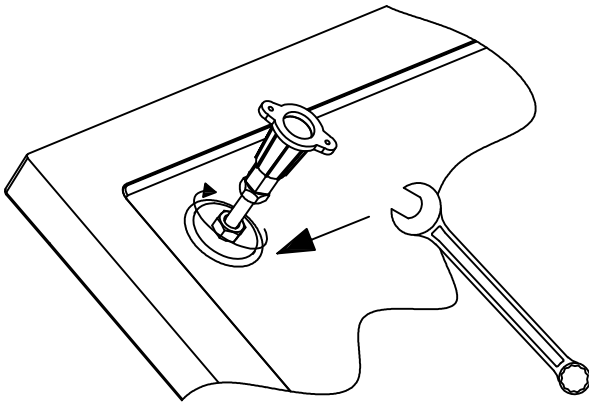

4

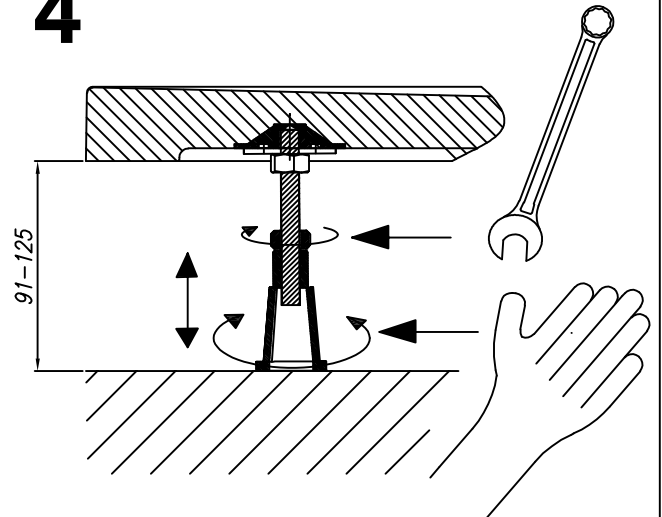

5

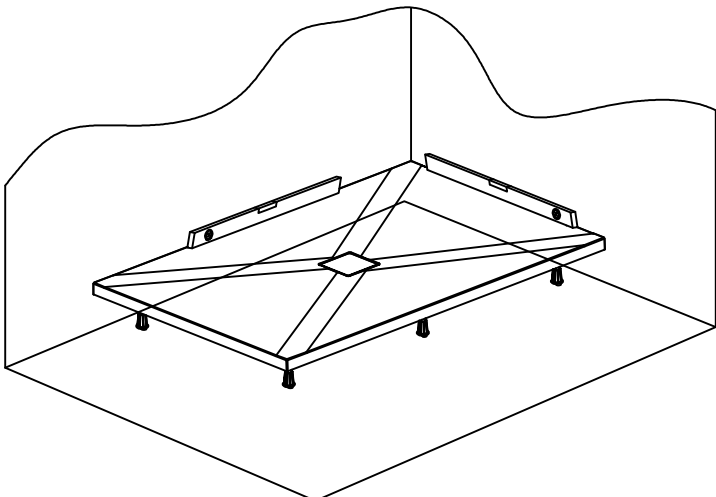

6

