


Tempo

Ash Mate 30X90


Available colours




Ash Mate




Nature
Mate




Cotton
Mate



Ash Brillo



Nature
Brillo

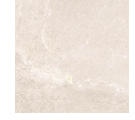

Cotton
Brillo

Finishes



Mate

Decorado y relieves



Ash Mate



Nature
Mate



Cotton
Mate



Nature
Brillo



Cotton
Brillo



Ash Brillo



Ash Mate



Cotton
Mate



Nature
Mate

Features



Matt



Pasta Blanca
White Body




Rectified




Available formats


30x90 cm Rect
11,8x35,4 in

A rectangular box representing the 30x90 cm format, with dimensions 11,8x35,4 in.


75X150 cm Rect
29,5x59 in

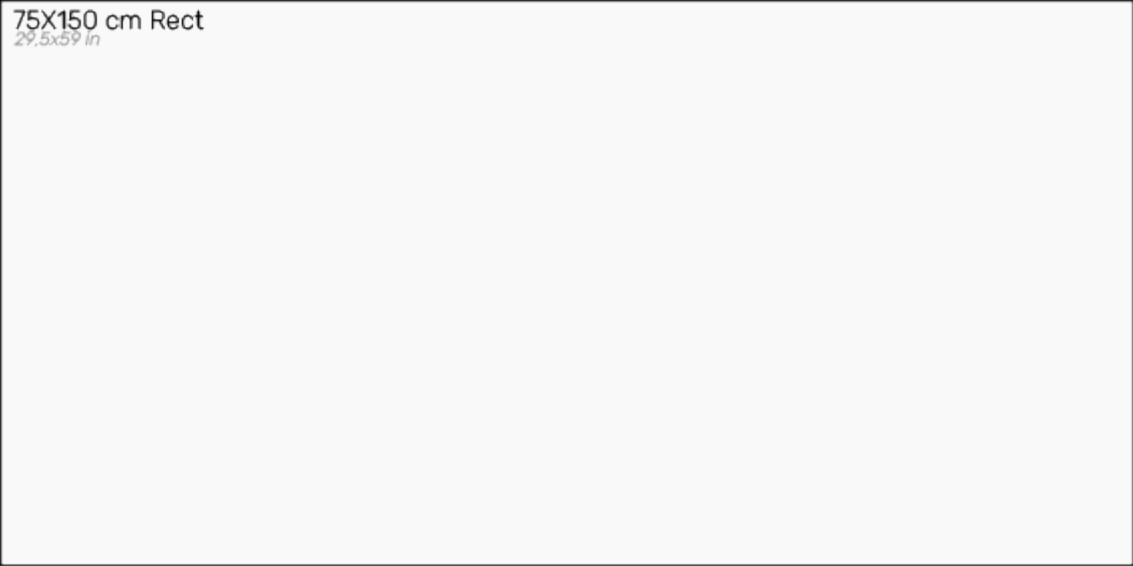A large rectangular box representing the 75X150 cm format, with dimensions 29,5x59 in.


60X120 cm Rect
23,6x47,2 in

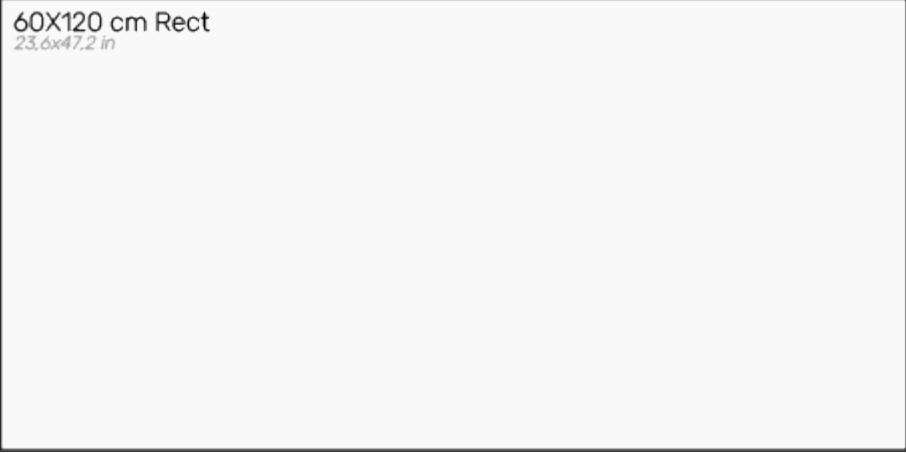A rectangular box representing the 60X120 cm format, with dimensions 23,6x47,2 in.

30x90 cm Rect
11,8x35,4 in

A rectangular box representing the 30x90 cm format, with dimensions 11,8x35,4 in.

30x90 cm Rect
11,8x35,4 in

A rectangular box representing the 30x90 cm format, with dimensions 11,8x35,4 in.

30x60 cm
11,8x23,6 in

20X60 cm
7,9x23,6 in

20X60 cm
7,9x23,6 in

60X60 cm Rect
23,6x23,6 in

60,5X60,5 cm
23,8x23,8 in

60X120 cm Rect
23,6x47,2 in

40"x40" in



60,5X60,5 cm
23,8x23,8 in



30x60 cm Rect
11,8"x23,6" in



30x60 cm Rect
11,8"x23,6" in



Tips

RECTIFIED PRODUCTS

It is recommended to use always a levelling system. Do not wet the pieces before its placement. Rectified products have to be installed always dry in order to avoid possible deformations of the material.

Prior to laying the rectified product, the wall must be plumbed with mortar. The minimum setting time of this surface should be 2-3 days.

Once the mortar is completely dry, the trowel should be used to apply the tile adhesive. The instructions indicated by the manufacturer on the product packaging must be strictly followed. For a correct placement it is recommended a minimum joint between pieces of 2 mm.

The fixing, placement and seating of the pieces should never be done by hitting the material. The walls must be completed.

Protect the pavements from premature traffic during the hardening phase.

Once all the pieces are in place and the tile adhesive has dried, proceed to grouting with grout and a rubber trowel. It is necessary to follow the instructions of kneading and placement indicated by the manufacturer on the product package.

Once the material has been grouted, it should be cleaned with a damp sponge, before the definitive hardening of the grouting.

FITTING RECOMENDATIONS FOR BIG SIZES WITH LEVELING SYSTEM

Grupo Halcon offers a wide range of formats. Following the latest trends in flooring, the sizes are getting larger. The advantage of these materials is that they have a much greater flexibility while maintaining the values for hardness and breaking strength.

In the market there are specific fitting systems for this type of product for easy installation. With these systems, we are able to overcome the unevenness of the floor and accommodate the curvature of the pieces getting a much flatter surface. Grupo Halcon, recommends the use of a leveling system to optimize installation time, avoid irregularities in the floor and get a perfect finish.

Find out more about the Tempo collection

A timeless appeal and renewed taste for traditional stone types that is perfectly in line with current interior design trends.

